



## ZM2 FIRE ALARM SYSTEM OPERATING INSTRUCTIONS

### 1. Operation Under a Fire Condition

- The common fire indicator flashes
- The appropriate Zone indicator lights
- The internal buzzer will activate
- The alarm sounders throughout the building will activate

```
12:45:00
A002 D000
001 Zone Alarm
Zone 1

FIR FLT TSTS MON
002 000 000 000
```

The above information provides zonal information. The **individual device** text label can now be viewed by pressing the **HELP** key. This will be displayed:

```
001
P:01 C:01 D:027
[OPT] Sales
Office West
```

**Canceling the Alarm** (must only be undertaken on authority from responsible person)

- a) Investigate cause of alarm i.e. call point operated (glass broken), smoke or heat detector in alarm (red LED flashing on device in alarm).
- b) Level two access is required (four digit code or turn to control on)
- c) Press the **SILENCE ALARMS** key to cancel the system sounders
- d) Press the **RESET** key to reset the system to normal.

### 2. Operation Under a Fault Condition

The text display for faults is similar to that given for fire i.e. The display indicates the zone in fault. The text label for the device in fault together with the type of fault can be viewed by pressing the **HELP**.

#### Canceling the Fault

- Press the **Panel Silence** key to cancel the panel buzzer.
- Level two access is required (four digit code or turn to control on)
- Panel will auto reset when the fault goes.

**Clymac Ltd, Cloudway Court, Belton Road, Loughborough, LE11 1LW**  
**Tel 01509 232651 Fax 01509 232665 E-mail Sales@clymac.co.uk**